

Uniquad Die Head Assembly 1/8"-2"

Item	Part No.	Description
1.	1433	Retainer Plate
2.	1432	Uniquad Scroll Plate
3.	1437	Operating Lever
4.	0-407	Operating Lever Stop Dowel Pin, 5/16" x 1 1/2"
5.	O-702	Operating Lever Pivot Dowel Pin, 1/2" x 1 1/8"
6.	2183	Uniquad Die Head Link
7.	2182	Uniquad Die Head Pivot Screw
8.	D-204	Pivot Screw Flat Washer, 3/8"
9.	1436	Scroll Plate Locking Lever
10.	—	Uniquad Dies, specify size and type (ex., 1/2" & 3/4" NPT)(See Die Tables)
11.	1431	Uniquad Die Head Housing
12.	1431-1	Die Head Pin
13.	F-053	Die Head Soc. Hd. Cap Screw, 10"-24" x 3/4" NPT
14.	B-1044-3	Ball
15.	12220	Spring
16.	12135	Expansion Plug

